 
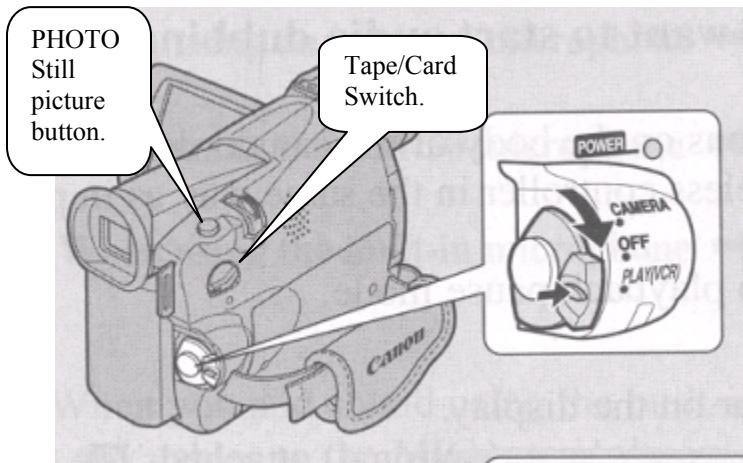 


# Canon ZR50 MC Digital Video Camcorder - Getting Started

The ZR50 is a video camcorder, but these instructions are for taking still pictures. BISSD has acquired software to use the video capabilities of the camcorder, called ArcSoft ShowBiz. You will need a mini DV tape and may also capture digital video using available software, such as Ulead. If you have XP, it also has video capture abilities built in. With XP, the download of digital pictures can also be automated without the use of other software.

## Recording Still Images

Pages 107-108 in the Canon Instruction Manual address recording still images. Still images are recorded to the Multimedia Card, which is inserted into the camera. (See picture to the right for location of memory card slot.)

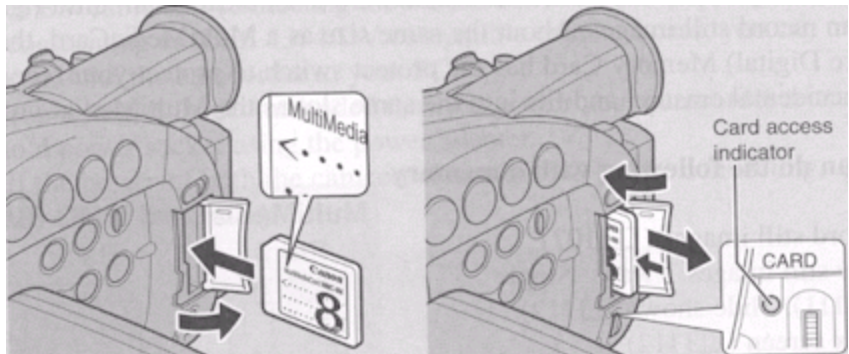

After the card is inserted into the Card Slot, the Tape/Card Switch must be set to Card and the Power switch set to Camera.


Use the PHOTO button to take still pictures. Press the PHOTO button halfway and hold it to lock exposure. When the green mark displays on the viewer, the focus is adjusted and is ready for the picture. Press the PHOTO button all the way down


## Viewing Images

(Pages 111-112)

Switch the Power button to Play (VCR). Press the + to move forward and press the - to move backwards through the pictures.

Press both the + and - at the same time to jump from one still image to another that are not adjacent. Press the AE SHIFT button to view an index of up to six images at a time.

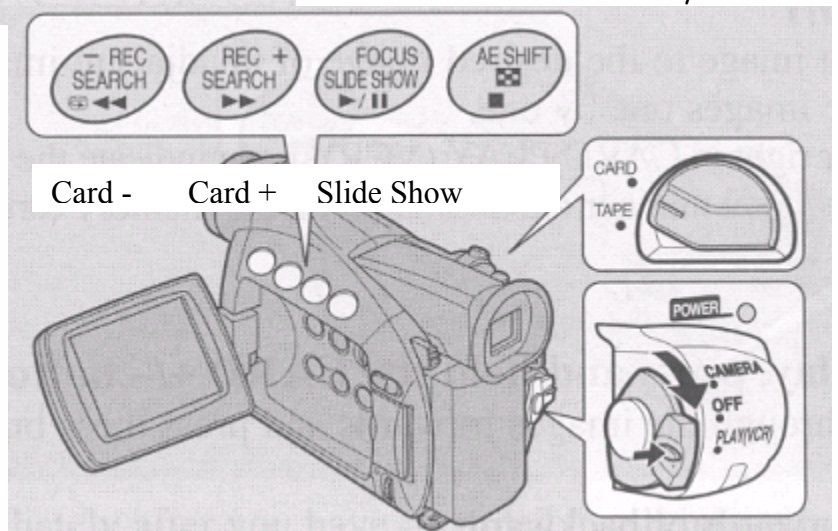

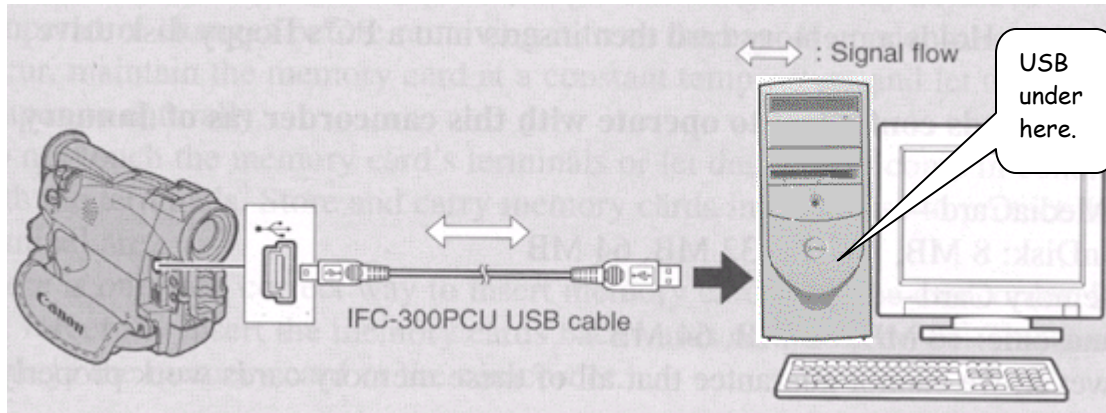

### Working with images on the computer

Be sure all software is loaded before connecting the camera.

Use the USB cable and the Canon Digital Video Solution Disk software provided with the camera. The USB cable can be plugged in under the opening cover on the front of the DELL tower. (See picture above.)

Connect camera to computer USB.

Connect camera to an AC outlet to save battery.

Set the Power Switch to Play (VCR).

Double click the Canon ZoomBrowser EX icon on the desktop.

Click the Import Images button at the bottom of the screen and select "From Dcim..." as pictured.

The Camera window will open.

### Organizing Images in Folders


Create a folder by right clicking the "Image Library One" folder in the left window panel of the ZoomBrowser EX program.

Select New Folder from the pop-up menu and input a folder name.

Click on the new folder.

Select the image you wish to download by clicking it once in the Camera window. To add more images at the same time, hold down the shift key and click each of them.

Click the DOWNLOAD button below the images in the Camera window to save them to the folder.

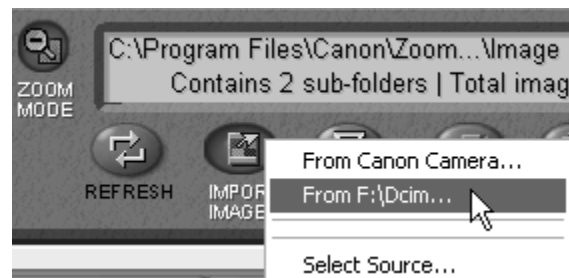

Pages 33-41 in the Canon Digital Video Solution Disk booklet are very helpful.